



Notifications Panel



You can expand the notification area to provide more detailed information about the current onscreen notification icons.

1. Tap the status bar to reveal the Notifications tab, and then drag the tab to the bottom of the screen to open the Notifications panel.
2. Tap a notification entry to open the associated application.

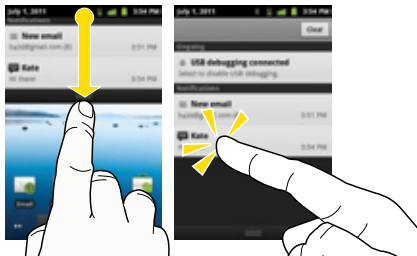

Note: The Notifications panel can also be opened on the Home screen by pressing  and then tapping **More > Notifications**.

Customize Your Home Screen

1. Press  >  and tap **Add**.
2. On the Add to Home screen, touch the item you wish to add (**Shortcuts, Widgets, Folders, or Wallpapers**).





For example, to add a Power Control widget:

1. From the Add to Home screen, tap **Widgets > Power Control**.
2. If the widget is too large for the free space on the screen, slide to a screen with sufficient space, and repeat step 1.

From your new Power Control widget, you can turn wireless capabilities (WiFi, Bluetooth, GPS, Sync, Brightness) on and off, and adjust the screen brightness.

Camera & Camcorder







Take a Picture

1. Press  and tap  > **Camera** .
2. Using your display as a viewfinder, aim the camera lens at your subject, and press .

View Pictures

1. Press  and tap  > **Gallery**  to view the Camera folders.
2. Tap a picture and then tap **Menu** to explore other options, including sharing the picture using **Bluetooth**, **Email**, **Gmail**, **Messaging**, **Picasa**, or **Wi-Fi**.

Record a Video

1. Press  and tap  > **Camera**  to activate camera mode.
2. Tap  to activate camcorder mode and select the recording mode.
3. Using the device's display screen as a viewfinder, aim the lens at your subject, and tap  or press  to begin recording.

4. Tap  or press  to stop recording.

View videos

1. Press  and tap  > **Gallery** .
2. Tap a video icon to view the video.

Share Pictures and Videos

1. Press  and tap  > **Gallery** .
2. Tap **Camera** to reveal your pictures and videos, and then press and hold a picture or video to send.
3. Tap **Share** and select a sharing option, such as **Bluetooth**, **Email**, **Gmail**, **Messaging**, **Picasa**, **YouTube**, or **Wi-Fi**. Follow the onscreen instructions to send your picture or video clip.



P

- Phone Call
 - Answering 14**
 - Making 14**
- Phone Number
 - Save 16**
 - Retrieve 16**

Picture Messages 15

- Pictures
 - Take 20**

- Pinch 5
- Predictive Text 11
- Press and hold 4

Q

- Qik 25
 - Video Chat 25**

QWERTY Keyboard 10

R

- Rotate Screen 5
- Resources 36

S

- Settings 31
- Screen
 - Turn On and Off 1**
 - Unlock 1**

- Shortcuts 7
- Slide 5
- Sprint Football Live 31
- Sprint Customer Service 32
- Sprint ID 3
- Sprint Mobile Hotspot 29
- Sprint Music 28
- Sprint Radio 30
- Sprint TV and Movies 29
- Sprint Zone 28, 34
- Status Bar 6
- Swype 5, 10-11

T

- Tap 4
- TeleNav GPS Navigator 31
- Text Messages 15
- Total Equipment Protection 35

U

Unlock Screen 1

V

- Video Chat 25
- Videos
 - Record 20**
 - Share 20**
- Voicemail 13

W


- Wallpaper 7
- Web 21
- Widgets 7
- Wi-Fi 22

Y

YouTube 24

The services described in this guide may require a subscription to a service plan and/or may incur additional charges. Not all services will work on all devices. See www.sprint.com/coverage for more details.

Portions of this guide are reproductions of work created and shared by Google and used according to terms described in the Creative Commons 3.0 Attribution License.

Important Privacy Message. This device is capable of determining its/your geographical location. To set controls for access and use of your location information by others, press  and tap **Settings > Location & security**. Select **Use wireless networks** and/or **Use GPS satellites** for location sources. Follow any applicable prompts. These settings for the use of location information can be turned on and off. For some applications and services you select, a device must be turned on and set to allow collection of location information in order to function.

Please be advised that if you use a third party application, the application may collect your personal information or require Sprint to disclose your customer information, including location information (when applicable), to the application provider or some other third party. Sprint's policies do not apply to these third party applications. Please carefully review the application's terms of use and/or the application provider's policies for more information about how the application will collect, access, use or disclose your information before using a third-party application. Terms of use and other policies usually are available on the application provider's website.

©2011 Sprint. SPRINT and the logo are trademarks of Sprint. Other marks are property of their respective owners. Samsung and Transform™ Ultra are trademarks of Samsung Electronics America, Inc. and/or its related entities. Other marks are property of their respective owners. Screen images simulated.

Printed in China

GH68-35034A